

10813

Fig.1

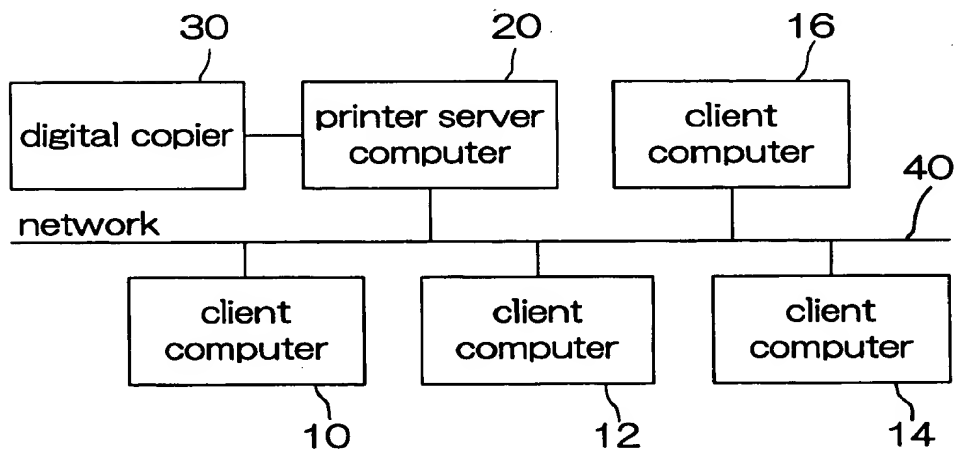


Fig.2

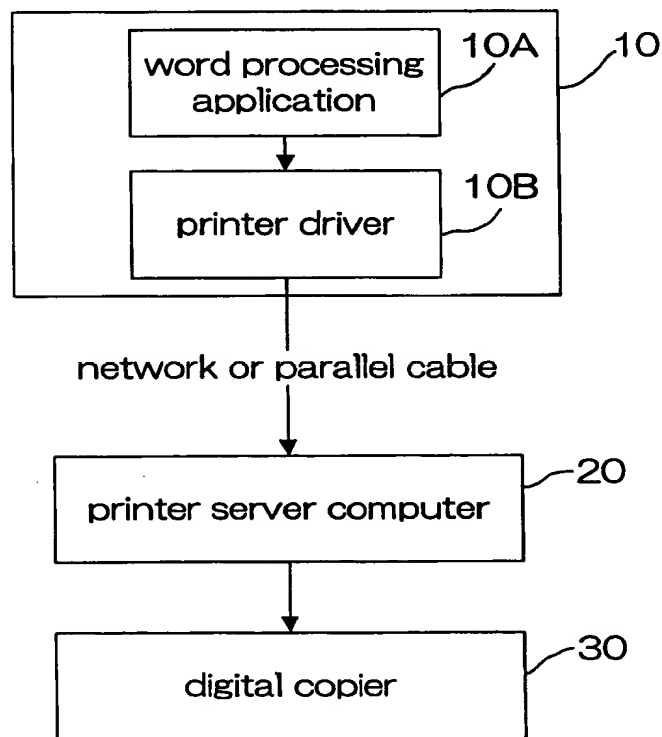


FIG. 1

Fig.3

50

print

printer

name (N) : printer 1 ▼ property (P) 51

status : idling

connected to : LPT1 ☐ file output (L)

print area

☒ all (A)

☐ edited page (E) ☐ selected portion (S)

☐ designated page (G)

copy

copies (C) : 1

☐ print per copy (I)

☐ 1 ☐ 2 ☐ 3 ☐ 1 ☐ 2 ☐ 3

print reservation (R) : all ▼ print object (W) : document ▼

OK 52 cancel option (O)

Fig.4

65 64 60

property

general detail Setup Advanced Finishing Graphics Font

Minolta Pi

comment (C) :

segmented page (S) : (none) ▼ reference (B)

print test (I)

OK 61 cancel 62 apply (A) 63

Fig.5

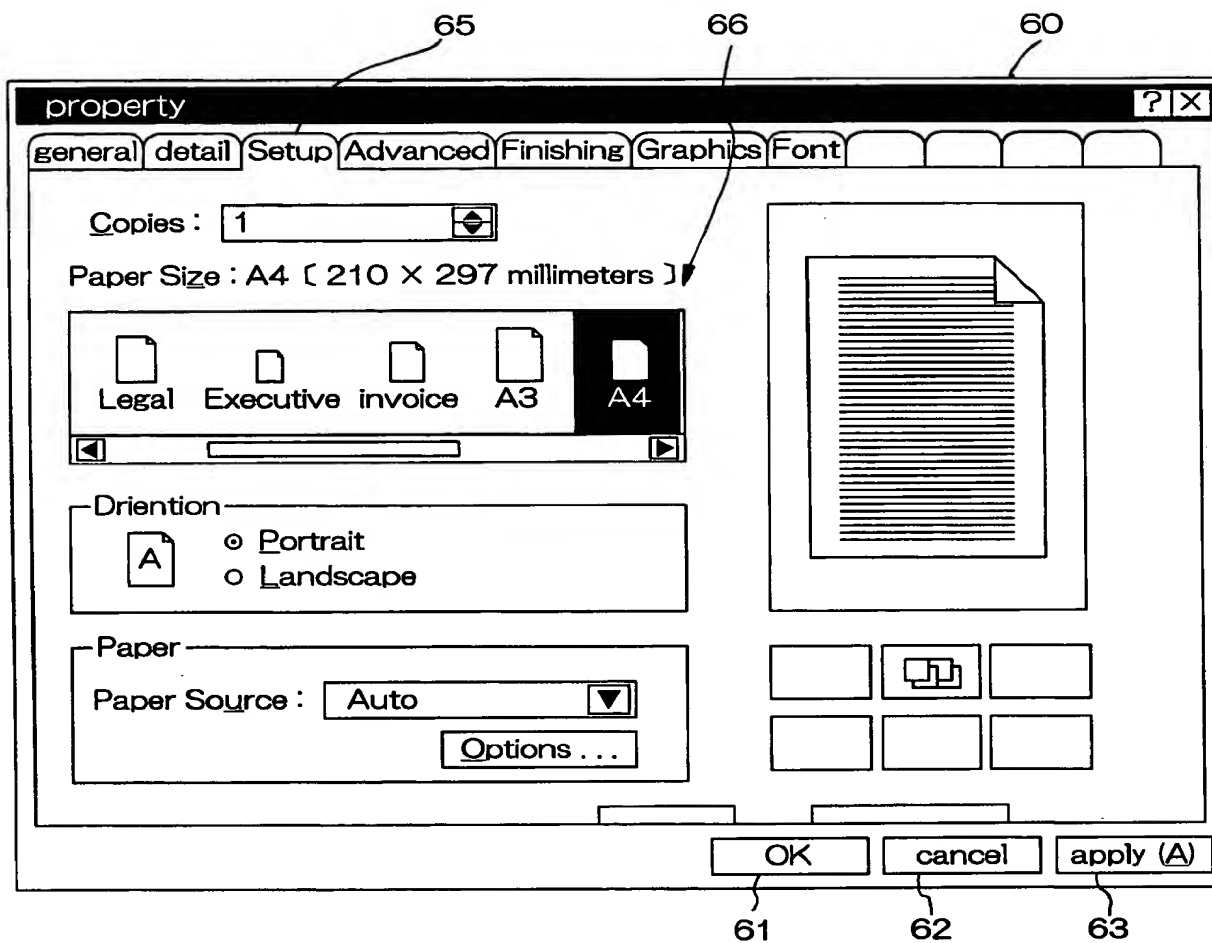


Fig.6

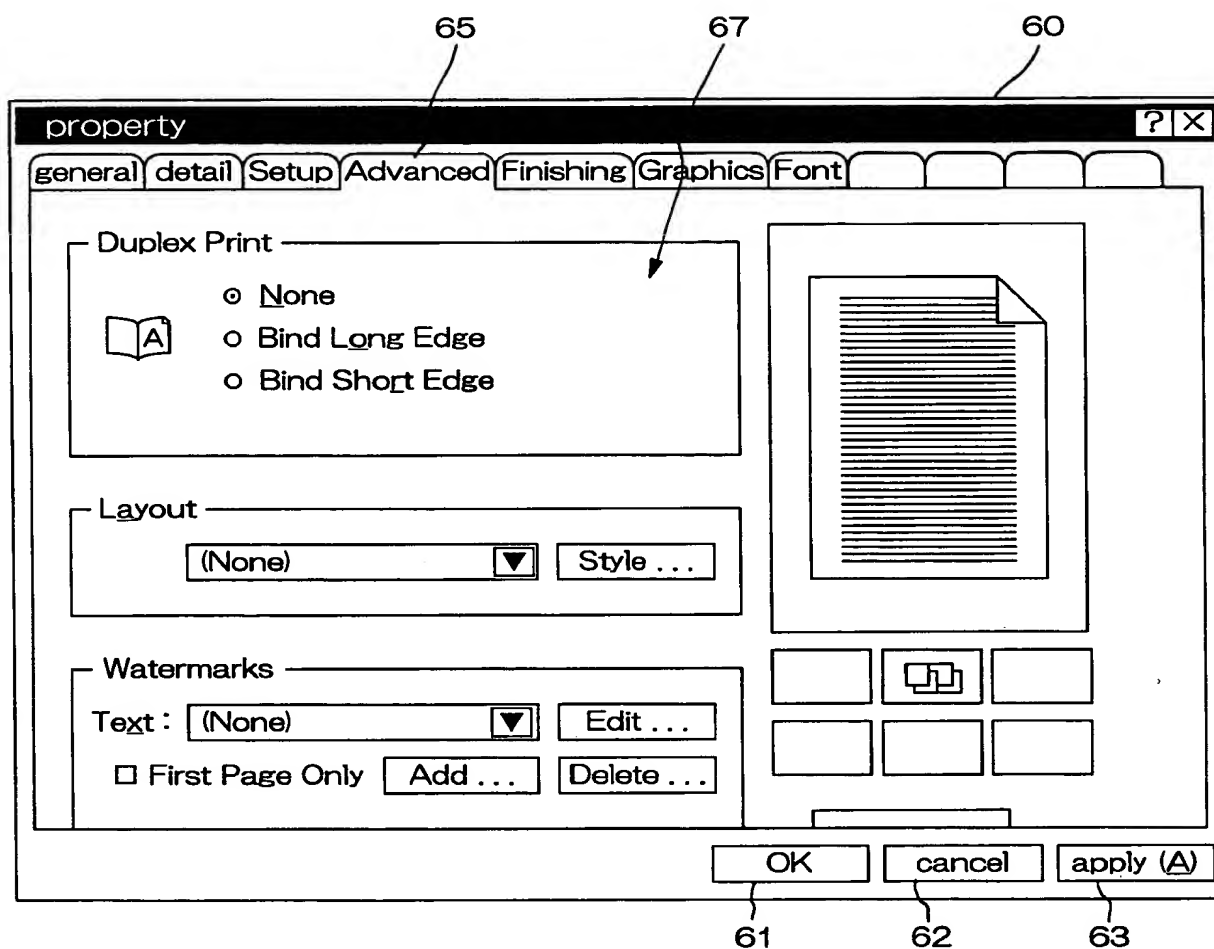


Fig.7

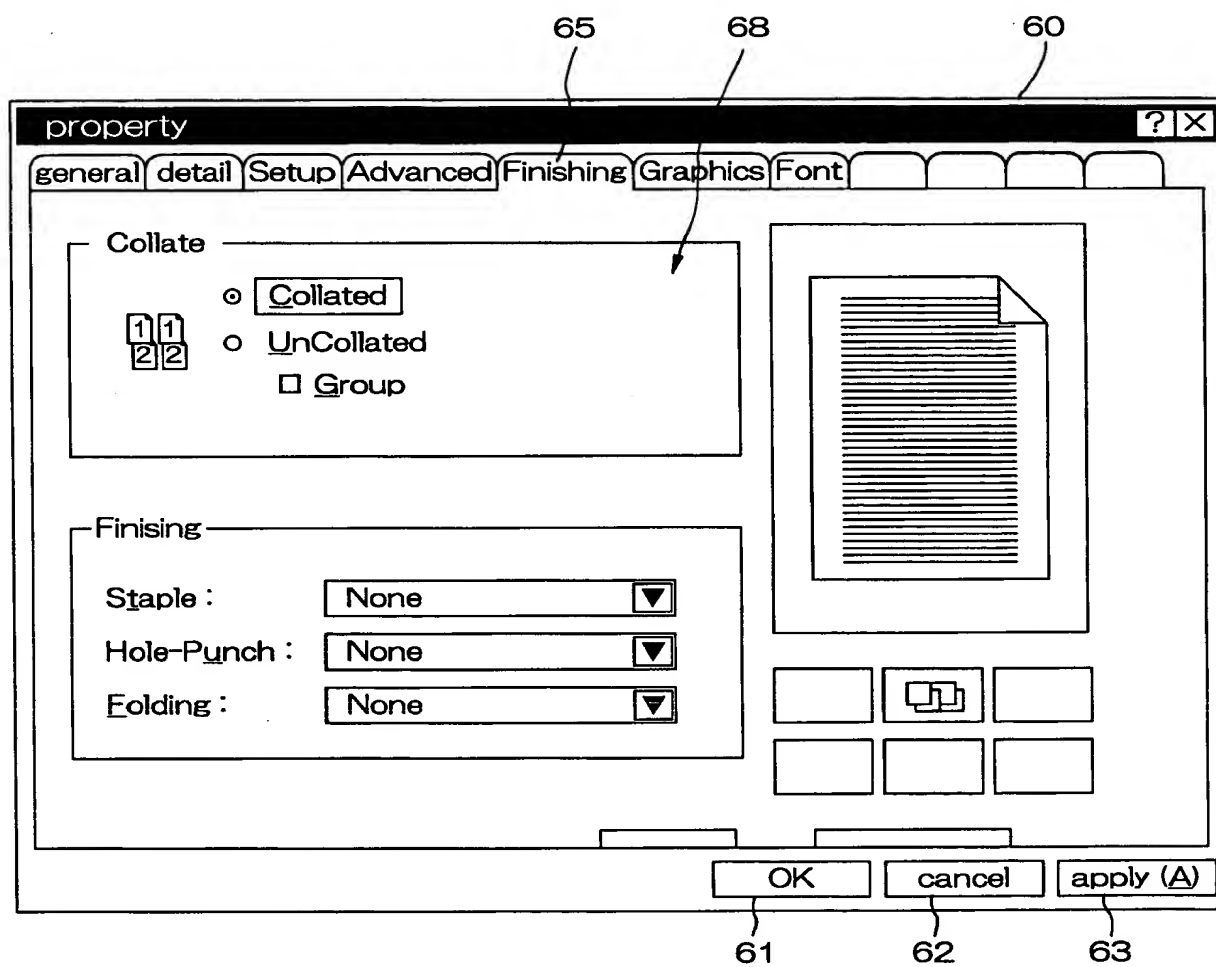


Fig.8

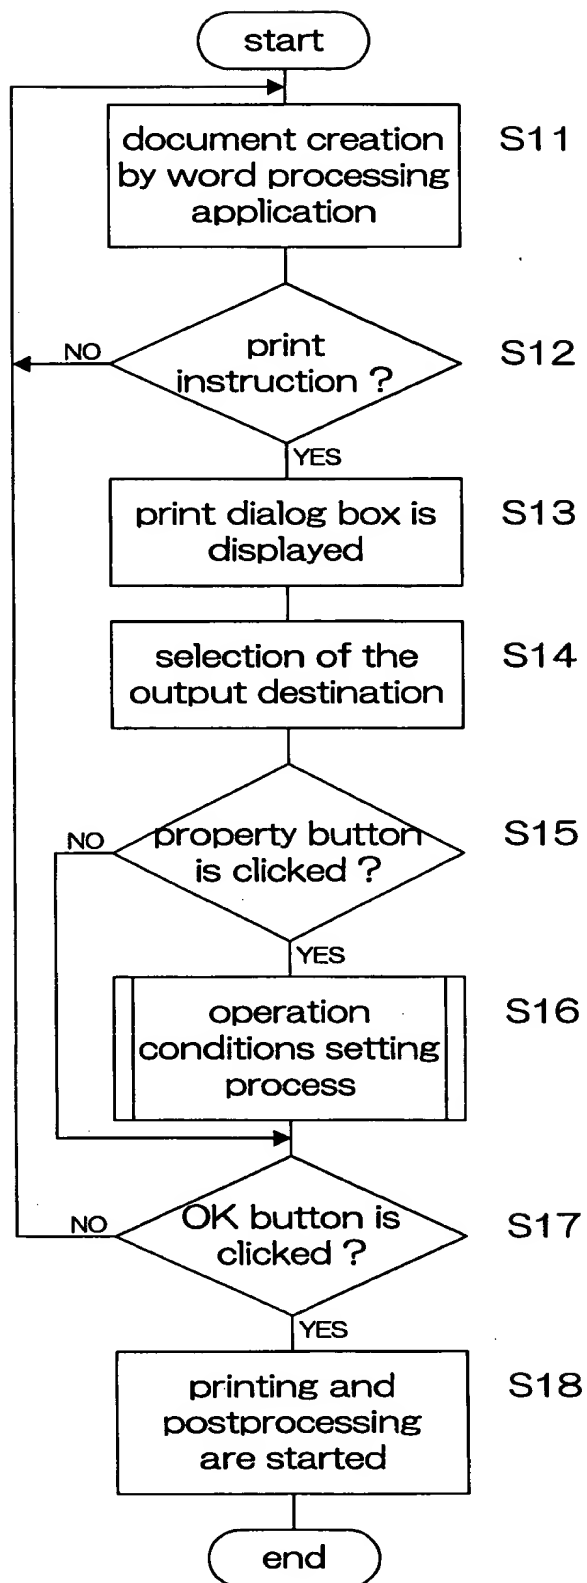


Fig.9

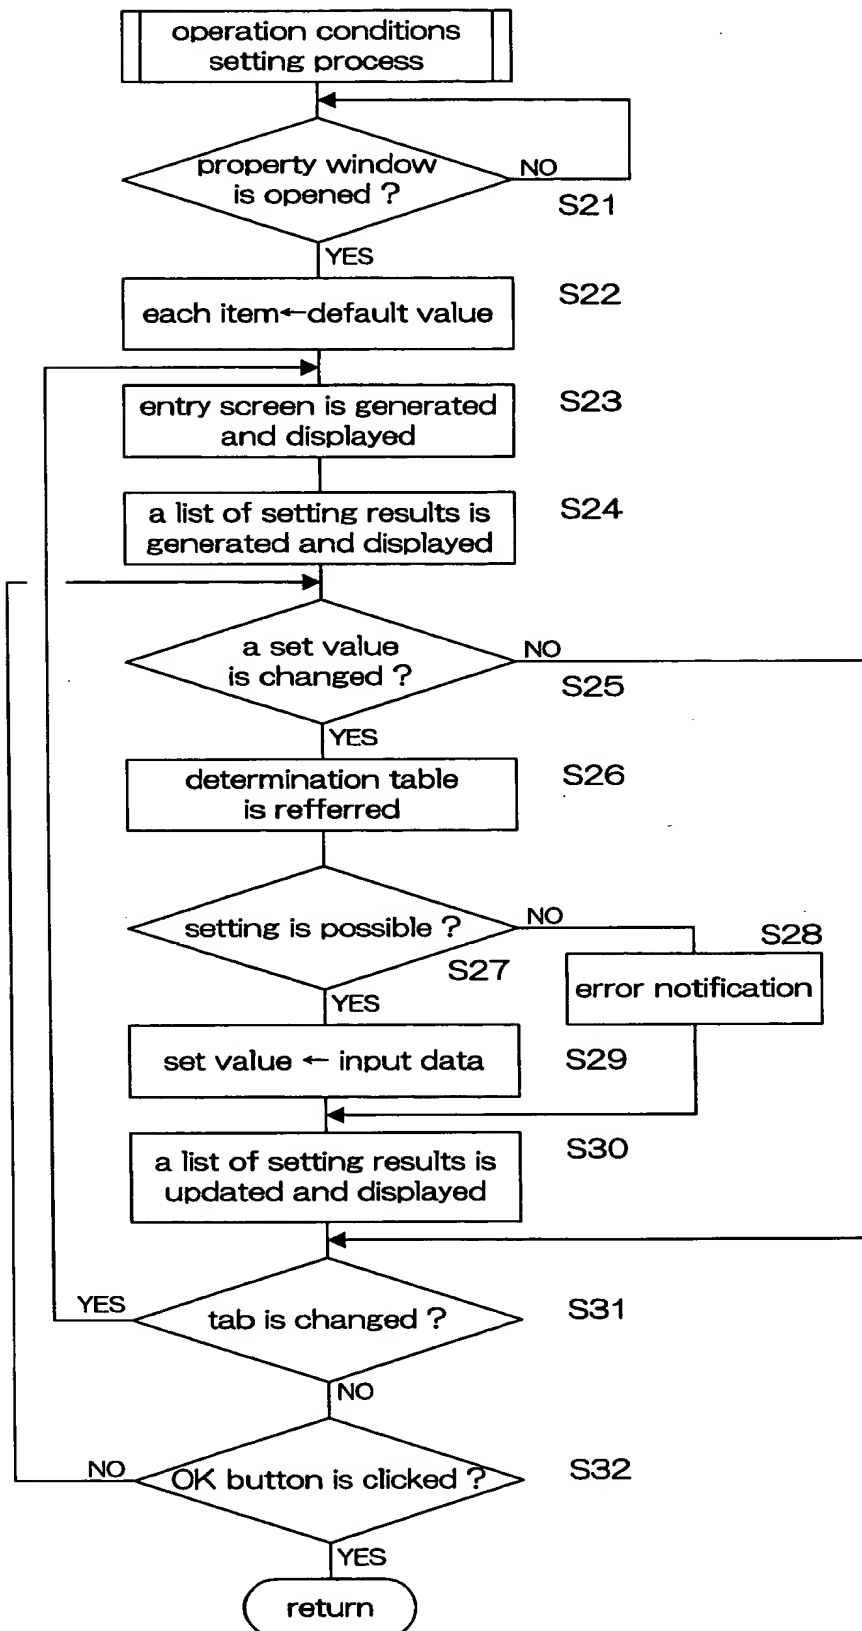


Fig.10

70

pre-set mode post-set mode				Setup									
				Copies	Paper Size				Orientation		Paper		
					[Letter]	Ledger	A4	A3	[Portrait]	Landscape	[Auto]	Upper Tray	2nd Tray
Finishing	Collate		[Collate]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		UnCollated		<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		Group	[Off]	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			On	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Staple		[None]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			Corner	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			Long Edge 2-points	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			Short Edge 2-points	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			Center 2-points	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Hole-Punch		[None]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			Long Edge Punch	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			Short Edge Punch	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	Folding		[None]	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			Crease	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			Half-Fold	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			Z-Fold	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>

Fig.11

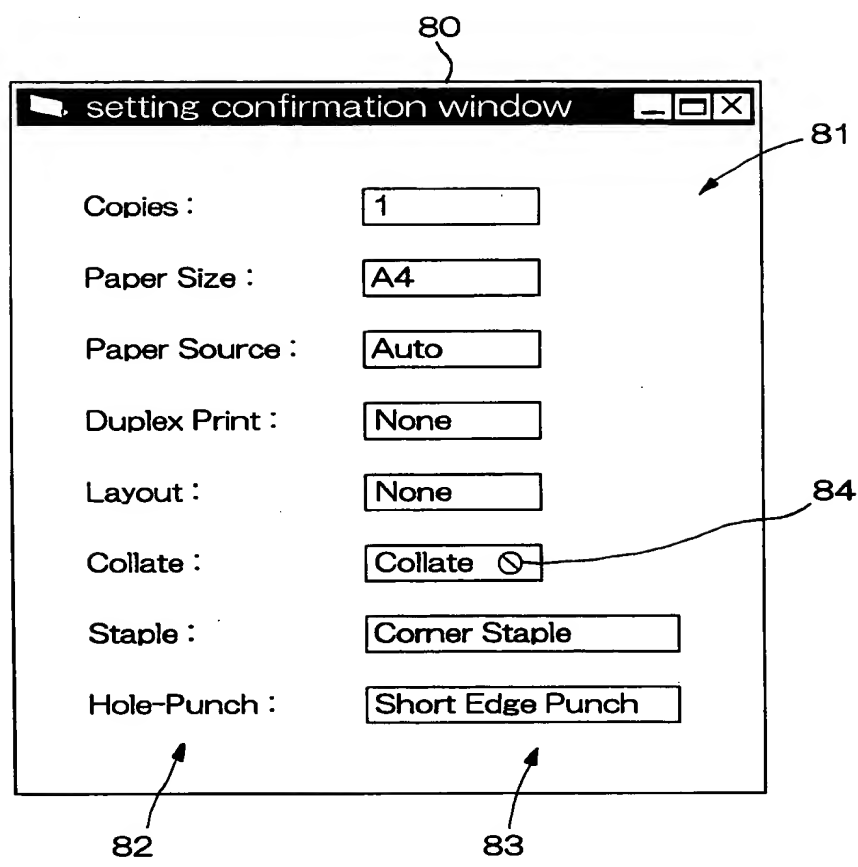


Fig.12

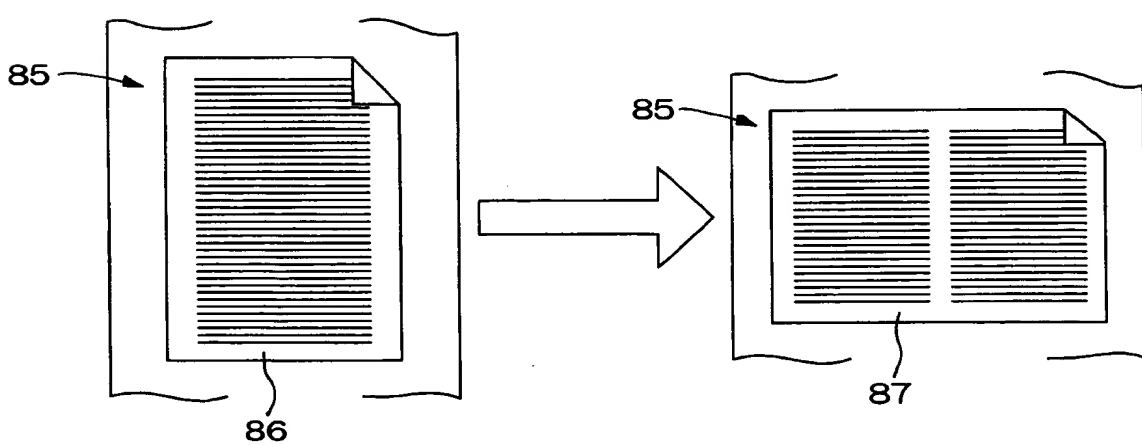


Fig.13

91

Copies : (1 ~ 999)

Paper Size : A4/Letter

Paper Source : Tray1/2

92 93 94

Fig.14

80

setting confirmation window

101

Copies :

Paper Size :

Paper Source :

Duplex Print :

Layout :

Collate :

Staple :

Hole-Punch :

102 103

Fig.15

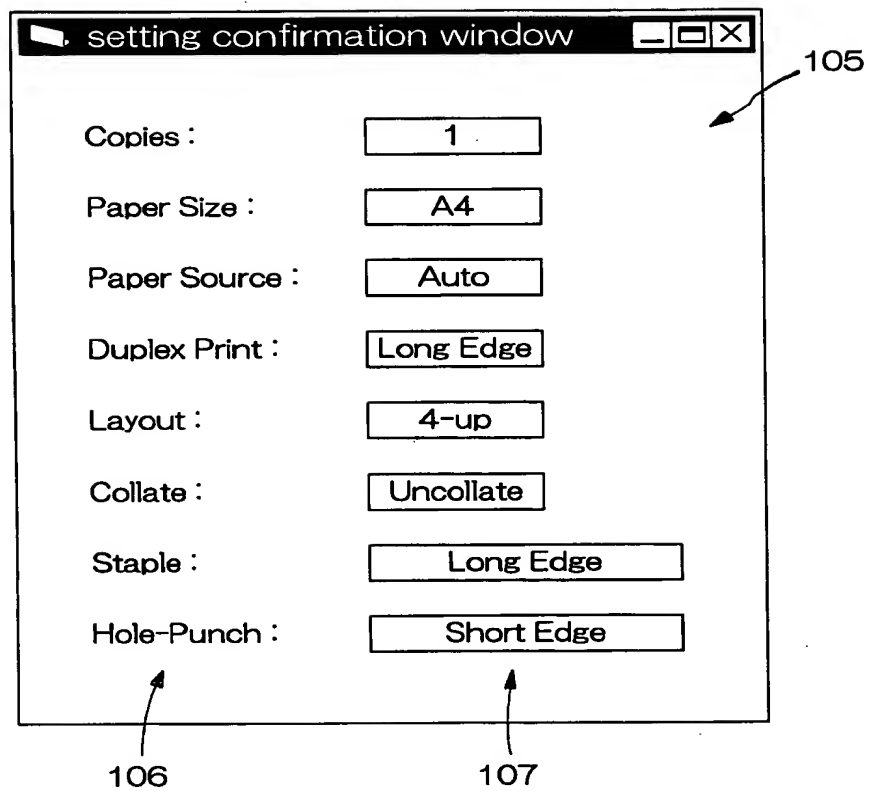


Figure 1 is a screenshot of a "property" dialog box, likely for a printer. The dialog has a title bar with the word "property" and standard window controls (minimize, maximize, close). Below the title bar are several tabs: "general", "detail", "Setup", "Advanced", "Finishing", "Graphics", and "Font". The "Finishing" tab is currently selected. The dialog is divided into two main sections. The left section contains settings for "Copies" (set to 1), "Paper Size" (set to A4, with a note "210 X 297 millimeters"), a "Paper Source" dropdown (set to Auto), a "Duplex Print" dropdown (set to None), a "Layout" dropdown (set to None), a "Collate" dropdown (set to Collate), a "Staple" dropdown (set to Corner Staple), and a "Hole-Punch" dropdown (set to Short Edge Punch). Below these are sections for "Orientation" (Portrait/Landscape) and "Paper" (Paper Source: Auto, with an "Options..." button). The right section contains settings for "Copies" (set to 1), "Paper Size" (set to A4), "Paper Source" (set to Auto), "Duplex Print" (set to None), "Layout" (set to None), "Collate" (set to Collate), "Staple" (set to Corner Staple), and "Hole-Punch" (set to Short Edge Punch). At the bottom of the dialog are three buttons: "OK", "cancel", and "apply (A)".

138B

Fig.17

